

DELTA

FEATURES AND OPERATIONAL INSTRUCTIONS

Two models: Aluminum Accents and Black Accents
For more information csi.nebraska.gov/products/seating/delta

ALUMINUM ACCENTS

CRANK/CHAIR ROCK

Crank clockwise to increase tension. Turn counter clockwise to release tension.

SEAT TILT TENSION ADJUSTMENT

Turn knob clockwise to increase tilt tension. Turn counter clockwise to decrease tension.



HEIGHT ADJUSTMENT

Turn knob forward to raise the height Turn knob forward put pressure on the seat to take seat down

BLACK ACCENTS

HEIGHT ADJUSTABLE ARMS

Push knob in to adjust to the height desired.

KNOB: ROCK/TILT TENSION

Turn knob clockwise to increase tilt tension. Turn counter clockwise to decrease tension.

HEIGHT ADJUSTMENT

Push knob up to adjust to desired height. Push knob and apply pressure to lower seat.

