


# Care Guide

## Criss Cross • Criss Cross 2.0

VINYL SEATING

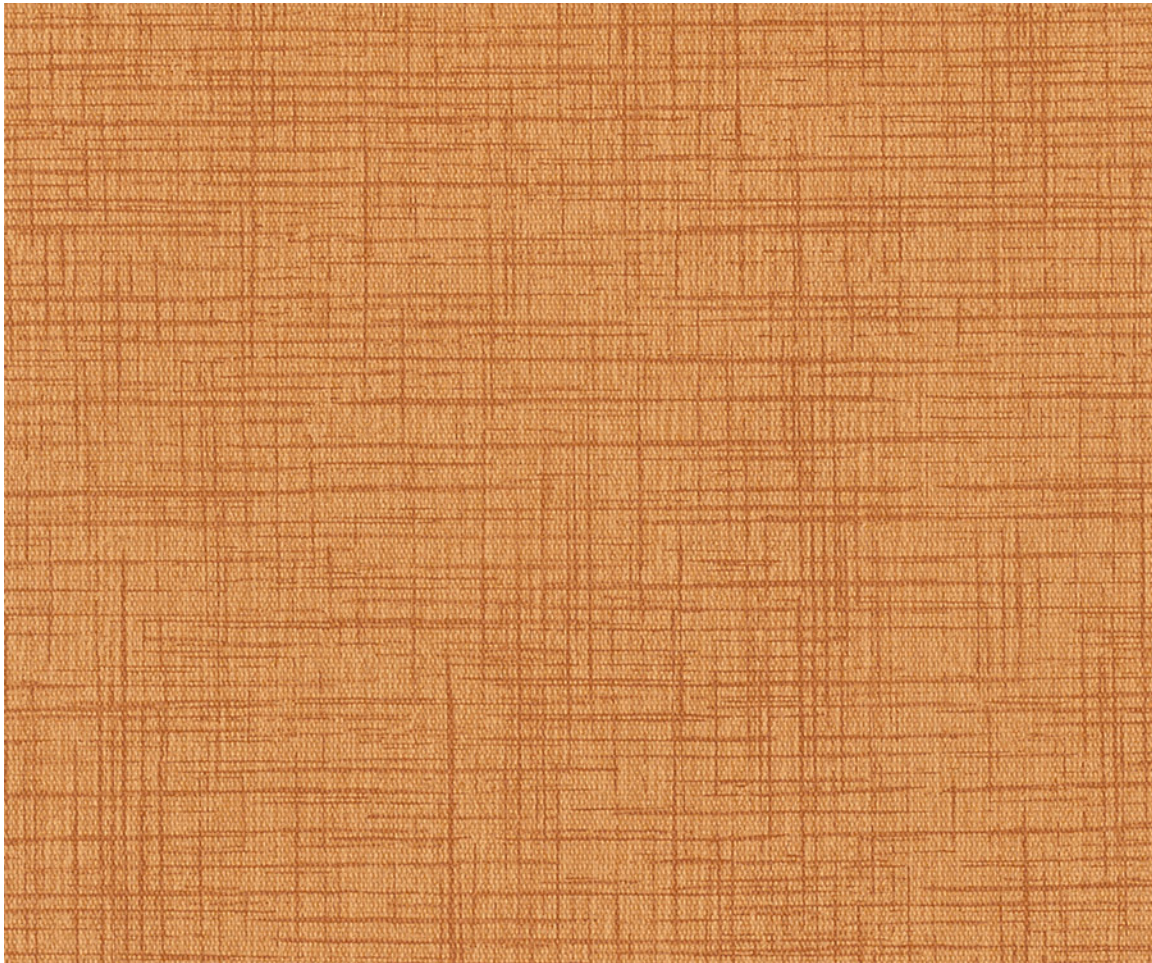

Criss Cross • Criss Cross 2.0 - CRS41 Caramel

©2020 C.F.Stinson, LLC. All rights reserved.

Content	Vinyl Surface with Polyester Backing
Finish	Advanced Soil and Stain Resistant Top Coat
Cleaning Code	<b>(W-S)</b> For water-based stains use water-based cleaners. For oil-based stains use solvent-based cleaners. We recommend using a professional cleaning service.  Bleach solutions of up to 10% may be used for more difficult stains.

Visit [cfstinson.com](http://cfstinson.com) for complete specifications.

## Criss Cross • Criss Cross 2.0

### Maintenance / General Recommendations

Clean and maintain your furniture regularly. Cleaning frequency depends on use. We recommend using a professional furniture cleaning service.

Always test cleaning solutions and methods in an inconspicuous area of the furniture before proceeding. Treat spills and stains promptly. The longer the stain remains, the more difficult it will be to remove. Clean spots or stains from the edge of the stain working toward the center.

For regular cleaning and maintenance, remove excess soil with a damp, non-abrasive cloth. Use a solution of mild liquid soap and water. Rinse with clean water and dry.

### Stain Treatment / Disinfection

For stubborn stains or heavy soiling use a straight application of concentrated cleaners such as Formula 409® or Fantastik®. Wipe with clean, nonabrasive cloth, rinse with water and dry.

For more difficult stains or to disinfect, use a mixture of no more than 10% bleach and 90% water. **Always** rinse with clean water and dry. **Never** use full strength bleach to clean this material or any other coated fabric.

For persistent stains use a 1:1 mix of isopropyl alcohol and water. Use a clean, non-abrasive cloth saturated with the alcohol and water solution and rub the stain in circles. Pat dry with a clean non-abrasive cloth and check the results. Rinse thoroughly with clean water and pat dry.

We do not recommend the use of hard surface cleaners; however, the following cleaners / disinfectants have been tested for use on this material, diluted per manufacturer's instructions:

Clorox Healthcare® Hydrogen Peroxide Cleaner Disinfectant	Clorox Healthcare® Hydrogen Peroxide Cleaner Disinfectant Wipes
Clorox® Disinfecting Wipes	Ecolab® Neutral Disinfectant Cleaner
Ecolab® Oasis® 146 Multi-Quat Sanitizer	Fantastik®
Formula 409®	Green Works® Cleaners
Isopropyl Alcohol	KAY® SolidSense™ Sanitizer
Oasis® 144 Quat Sanitizer	Oxivir® TB
Perisept	Purell® Foodservice Surface Sanitizer
Sani Professional® Table Turners®	Sani-Cloth® HB Germicidal Disposable Wipe
Virex® II 256	Virox® Accel TB

Marks are the property of their respective owners. No affiliation or endorsement is implied.

If these cleaners / disinfectants are used, the material **must** be rinsed with clean water and dried with a clean cloth following application. Failure to rinse thoroughly with clean water and to pat dry may lead to cleaner build up and cause surface deterioration (cracking, blisters, peeling, discoloration, etc.).

Do **not** use cleaners marked "for hard non-porous surfaces only" unless indicated above. Such use may cause surface deterioration (cracking, blisters, peeling, discoloration, etc.).

### Caution:

- Indiscriminate use of strong cleaning chemicals can severely damage or discolor this material.
- Never apply full strength bleach to this material.
- Avoid cleaners containing abrasives.
- Do not use heat to clean this material. Hot water, hot water extraction, or steam cleaning is not recommended.
- Do not saturate material or let cleaning agents pool in seams.
- Several light applications of a cleaning agent are less harmful than a single concentrated application.
- Certain apparel dyes, including indigo dyes commonly used in denim jeans, may migrate on to the surface of the material and become visible on lighter colors. This phenomenon is increased by humidity and temperature and may be irreversible.
- Certain inks, including ball point ink can create permanent stains.
- If stain persists despite suggested cleaning methods, stain has probably set and may be permanent.
- Some solvents are highly flammable. Exercise proper care when cleaning with solvents and solvent cleaners. Read and follow manufacturer's directions on labels.

The information published in this Care Guide refers to performance of this product in specific tests conducted under laboratory conditions. Results may vary under actual conditions.

The information published in this Care Guide is not a guarantee and does not relieve the user from the responsibility of proper and safe use of the product and all cleaning agents. The use of certain agents can be harmful to the surface appearance and lifespan of the material. C.F. Stinson, LLC, its agents, representatives and assigns assume no responsibility resulting from the use of such cleaning agents on the material.

Under no circumstances shall C.F. Stinson, LLC be liable for any incidental, consequential, or other damage resulting from the negligence, misuse, mishandling, or exposure of any chemicals used in connection with maintenance and cleaning. Information relating to chemicals/cleaning agents, environmental use and human exposure should be reviewed with the appropriate suppliers. All label instructions on their use and precautions should be followed.

## Stinson®

C.F. Stinson, LLC  
2849 Product Drive  
Rochester Hills, MI 48309

P 800 841 6279  
F 248 299 3884

cfstinson.com